
FireFly Archway

ASSEMBLY INSTRUCTIONS

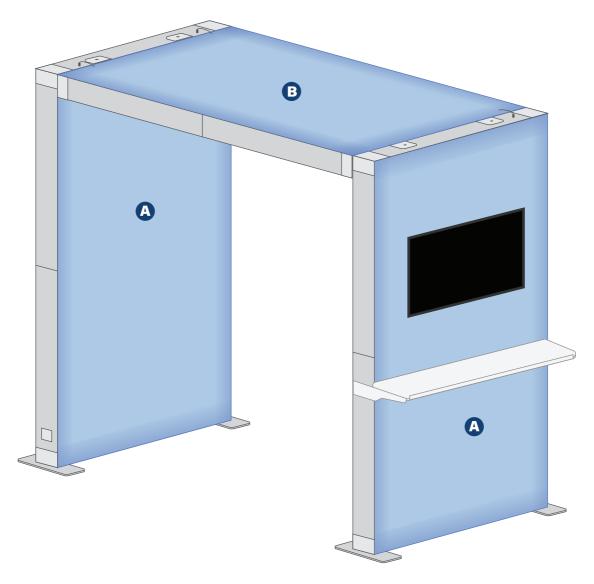

INCLUDED:

- A Front & Back Panels
- в Top Panel












Front & Back Panels

ASSEMBLY INSTRUCTIONS



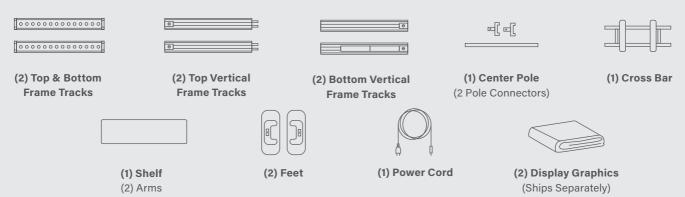


BOX CONTENTS - TV MOUNT








Assemble the Base

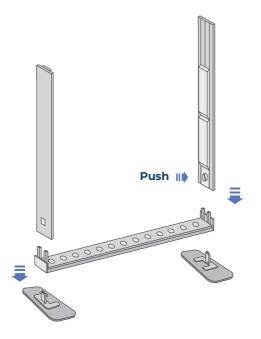

Repeat this process for the top half of the Frame




Complete the Frame

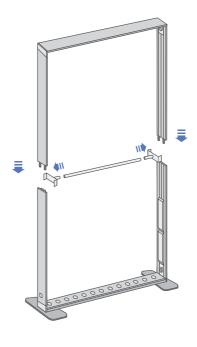

Once the halves are connected, install the Center Pole

3


Install Cross Bar (Front Panel)

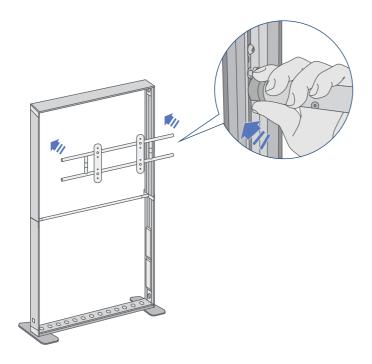

Slide the Bars into the Frame and twist upward to secure




Install Graphics

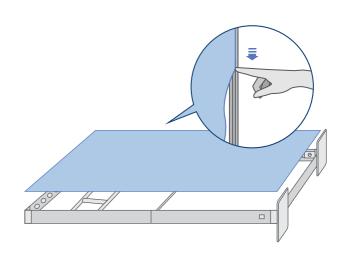

Lay the Frame on the floor and press the edges of the Graphic into the grooves of the Frame on both sides.




Attach TV Mount

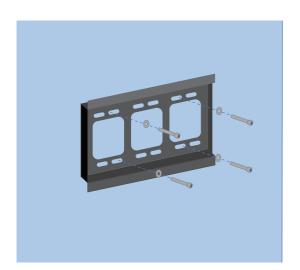

Ì

Attach Brackets to Monitor

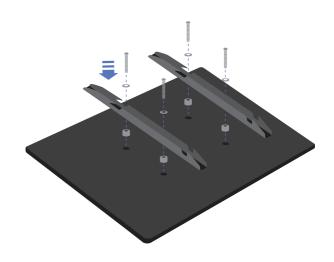

Screw the TV Mount on the display using the M6 Screws and M6 washers.

Use the Spacers and M4, M5, or M8 Screws.

B Top Panel

ASSEMBLY INSTRUCTIONS

BOX CONTENTS



(2) Back & Front Frame Tracks



(2) Back Sides Frame Tracks



(2) Front Sides Frame Tracks



(1) Center Pole (2 Pole Connectors)




(4) Top Knobs



(2) Display Graphics (Ships Separately)



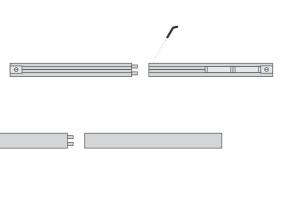


Match the Frame Tracks by label (Ex. L1 to L1) then use the Allen Key to secure the Frame.

Complete the Frame Push




Install Graphics

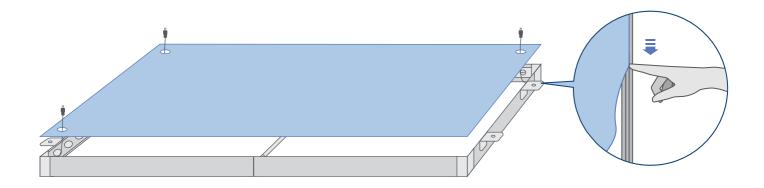


Press the edges of the graphic into the grooves of the Frame on both sides.



Connect the Panels

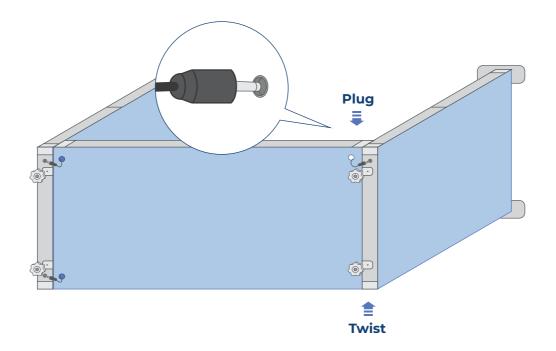

Plug in the Cables and twist the Top Knobs tight.

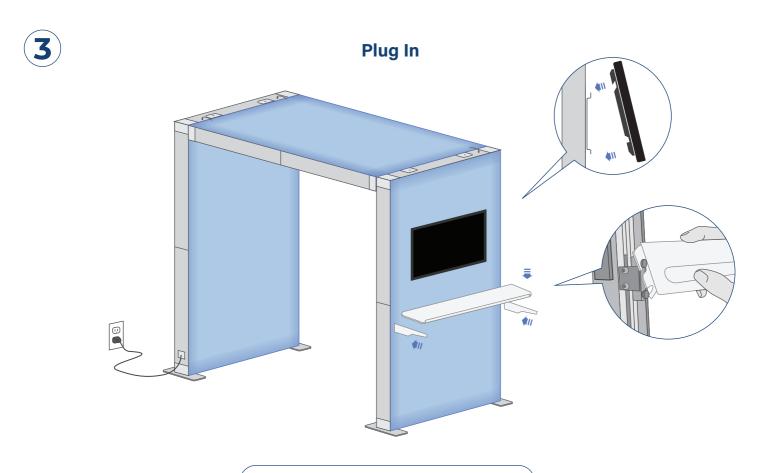

Stand up the Display, then mount your TV & Shelf